

[POWER] [COMMANDER III]

CERTIFIED **USB**

2000-2001 Honda CBR954RR Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port




The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

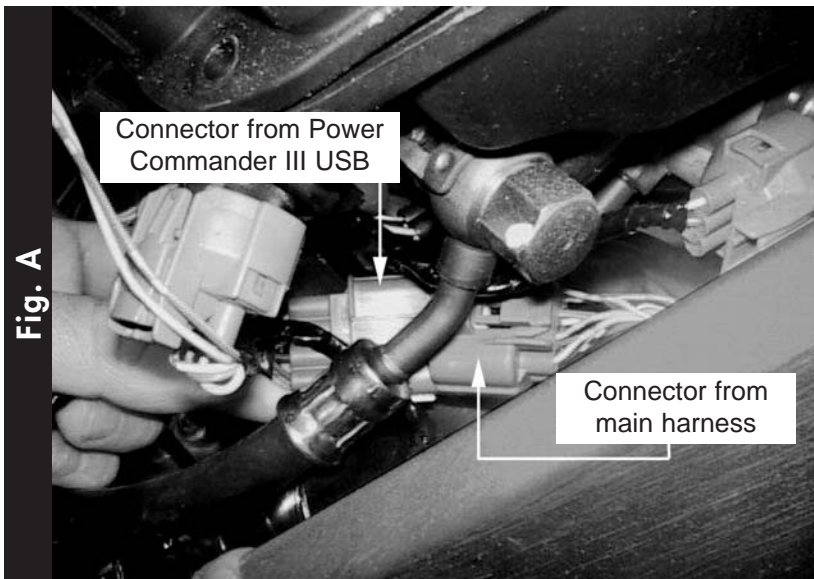

- 1) Remove the main seat.
- 2) Open the passenger seat hatch.
- 3) Remove the fuel tank mounting bolts.


NOTE: The fuel tank does not need to be removed in order to install the PCIII. If you choose to remove the fuel tank to aid in the installation, then all fuel must be drained prior to disconnecting the fuel lines.

- 4) Locate the main injector harness connector. It is on the right side of the chassis near the fuel hose fitting on the throttle bodies.

- 5) Disconnect the injector harness connector.

- 6) Plug the male connector from the PCIII into the female connector on the main harness (Fig. A).

- 7) Plug the female connector from the PCIII into the male connector from the stock injector harness (Fig. B).

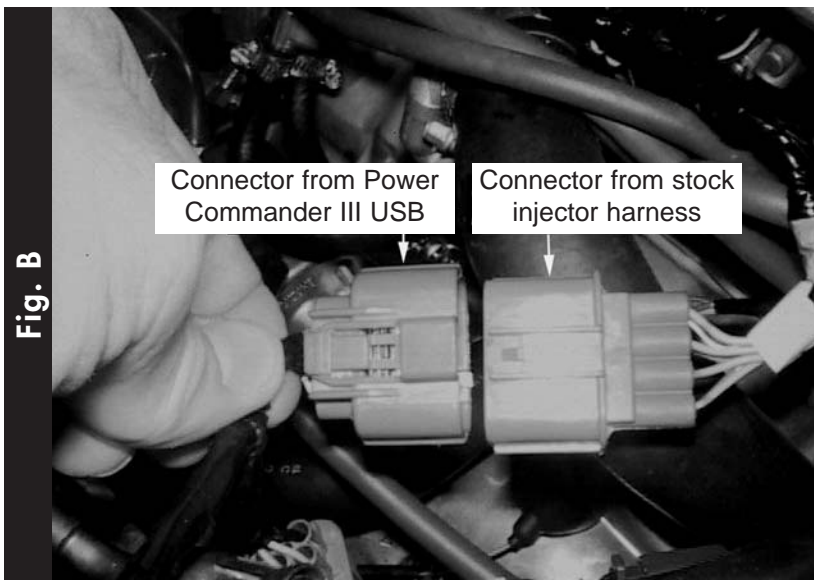

- 8) Route the harness from the PCIII under the fuel tank towards the tail section.

- 9) Reinstall the fuel tank making sure not to pinch the PCIII harness.

- 10) Attach ground wire from PCIII to negative terminal of the battery. (Fig. C)


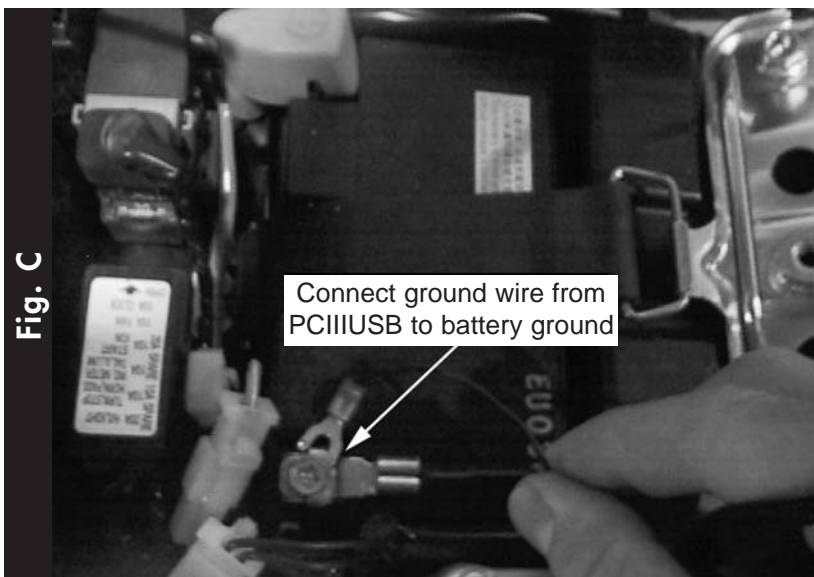


Fig. D

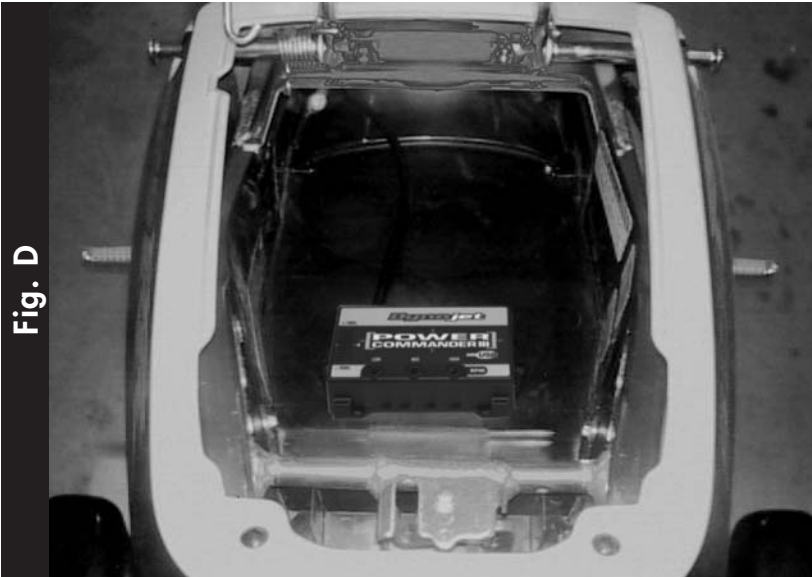

- 11) Route the PCIII and wiring under the rear seat subframe. Attach to inner fender below passenger seat using supplied velcro (Fig. D).
- 12) Reinstall main seat.