

# [POWER] [COMMANDER III]

CERTIFIED **USB**

## 1998-1999 Honda VFR800 Installation Instructions

### Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab

Button Adjustment Display



Faceplate Buttons

Expansion Port      USB Port



**The ignition MUST be turned OFF before installation!**

You can also download the Power Commander software and latest maps from our web site at:  
[www.powercommander.com](http://www.powercommander.com)


**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

Fig. A




- 1 Remove the seat.
- 2 Remove the front two fuel tank mounting bolts.
- 3 Prop the front of the fuel tank up.
- 4 Remove the left hand mid fairing.
- 5 Unplug the connector shown in Fig. A.

Fig. B

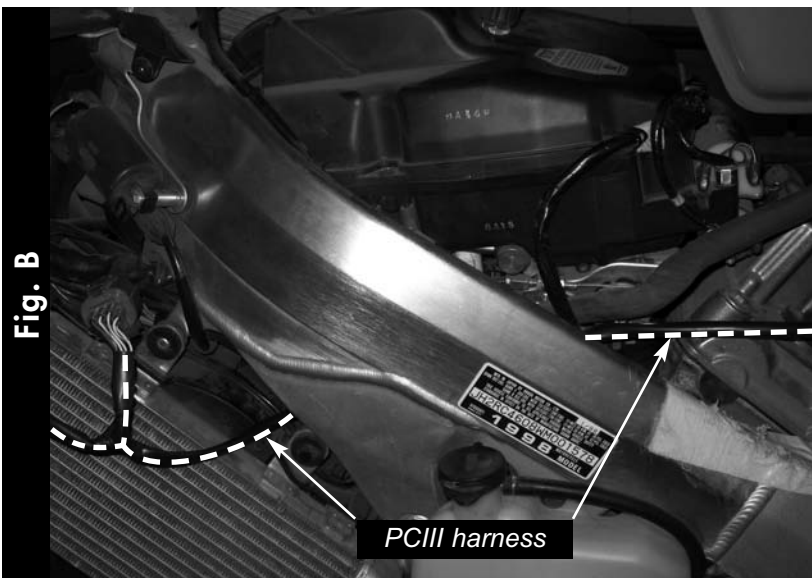


- 6 Route the PCIII harness from the inside of the frame and come out in between the mounts for the left hand radiator (Fig. B).

Fig. C

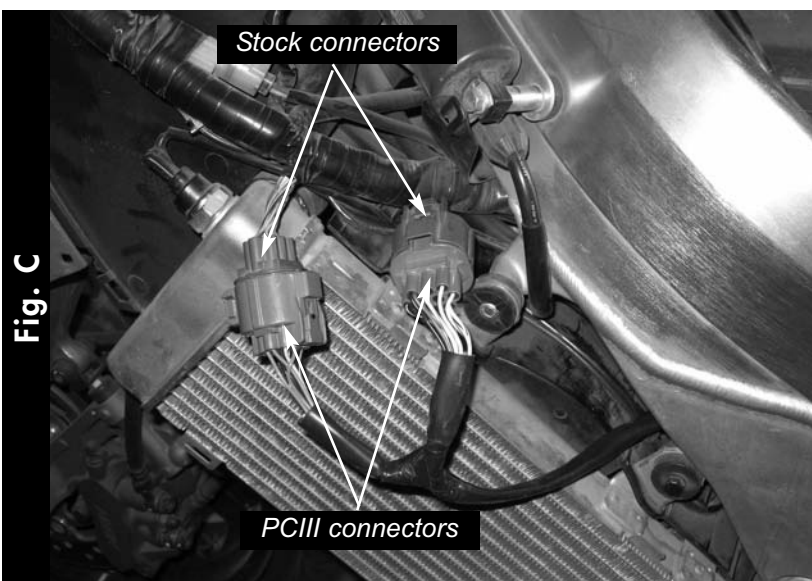

- 7 Connect the PCIII harness in-line of the stock connector that you unplugged in step 5 (Fig. C).

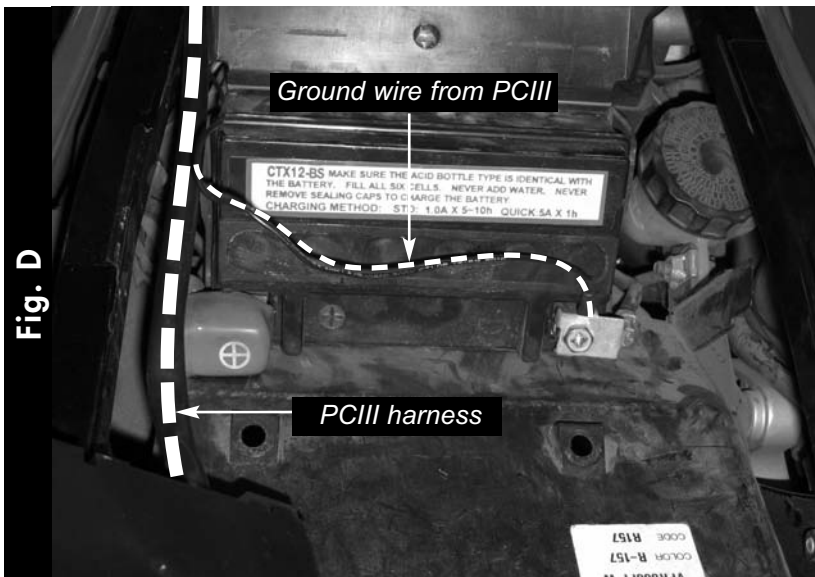

- 8 Lift the cover over the battery to access the terminals.
- 9 Attach the ground wire from the PCIII to the negative side of the battery (Fig. D).
- 10 Reinstall battery cover.



- 11 Attach the PCIII to the inner fender behind the battery box (Fig. E). Use the supplied velcro to attach the unit. Make sure to clean both surfaces with the alcohol swab before attaching.
- 12 Reinstall fuel tank and seat.