

# [POWER] [COMMANDER III]

CERTIFIED **USB**

## 1998-1999 Suzuki GSXR750 Installation Instructions

### Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab
- 1 Wire tap

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port




**The ignition MUST be turned OFF before installation!**


You can also download the Power Commander software and latest maps from our web site at:

[www.powercommander.com](http://www.powercommander.com)

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

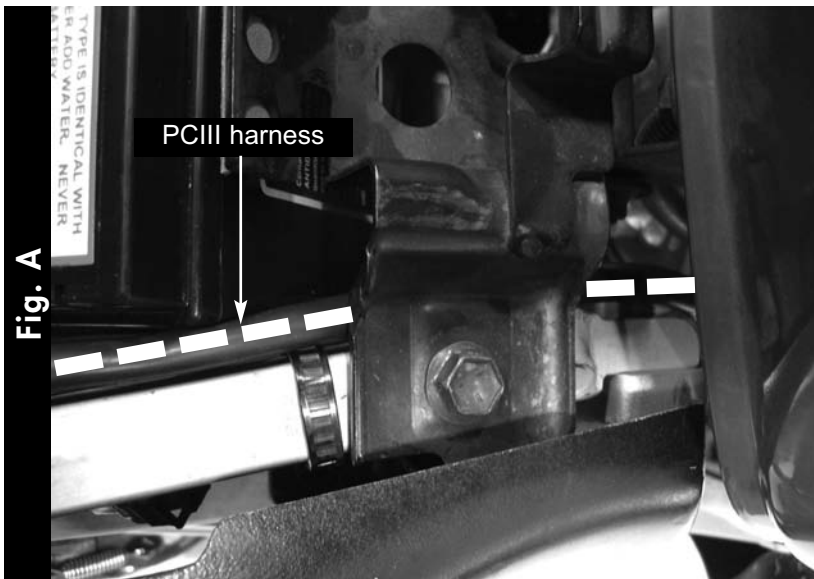


- 1 Remove the main seat and the passenger seat.
- 2 Hold the front of the fuel tank up using the prop rod located in the trunk area.
- 3 Lay the PCIII in the tail section.
- 4 Route the PCIII harness under the subframe and go towards the front of the bike. Route the PCIII harness under the battery bracket (Fig. A).

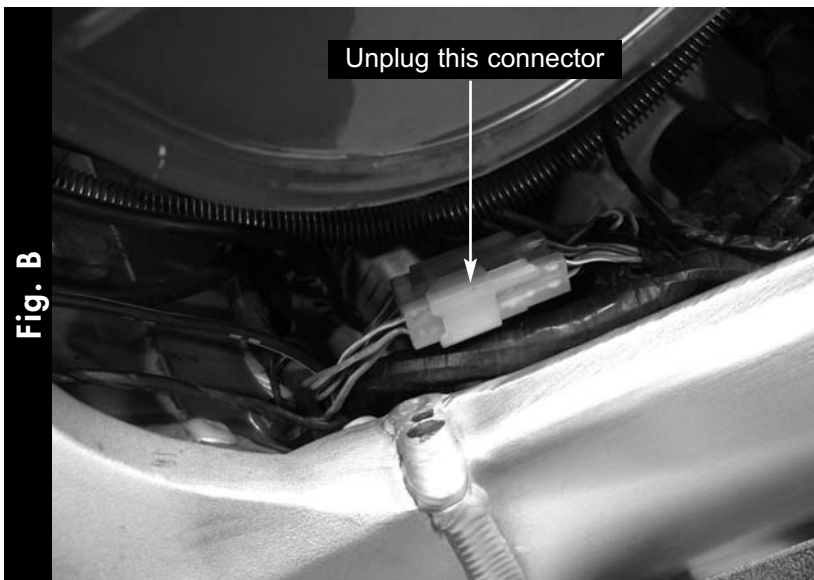


- 5 Locate the connector from the main wiring harness to the injector rail and unplug this connector (Fig. B).

*NOTE: This connector is located on the right hand side of the bike.*

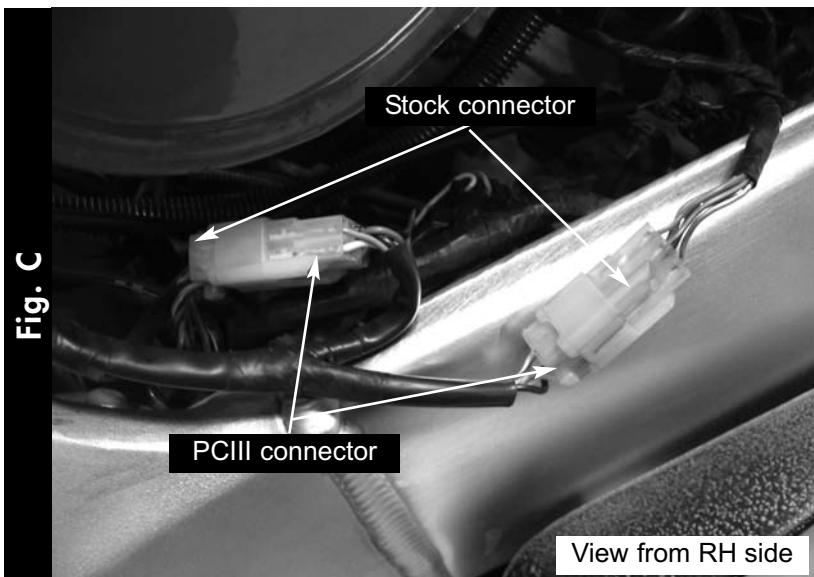


- 6 Plug the connectors from the PCIII in-line of the stock wiring harness (Fig. C).

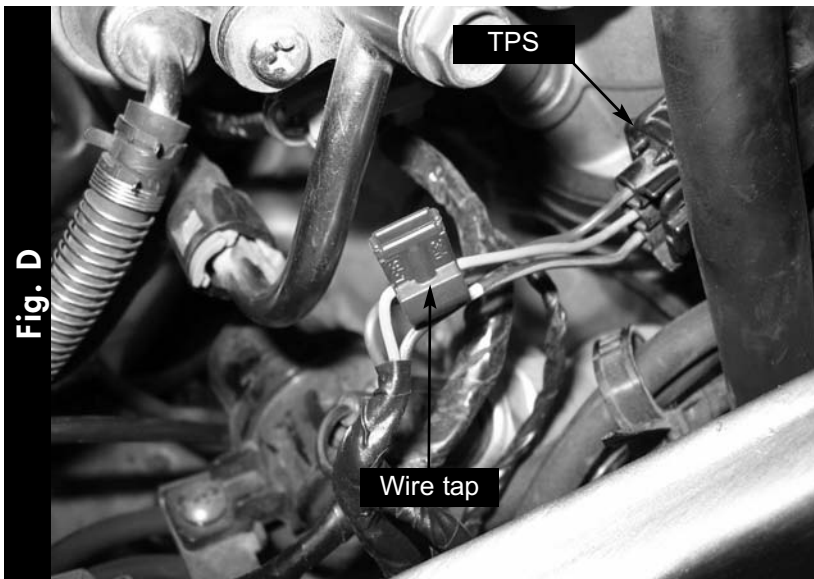

- 7 Locate the Throttle Position Sensor on the right hand side of the throttle bodies.
- 8 Crimp the supplied wire tap to the BLUE wire of the TPS.
- 9 Connect the GREY wire from the PCIII to the wire tap.

*It is recommended to use dielectric grease on these connections.*

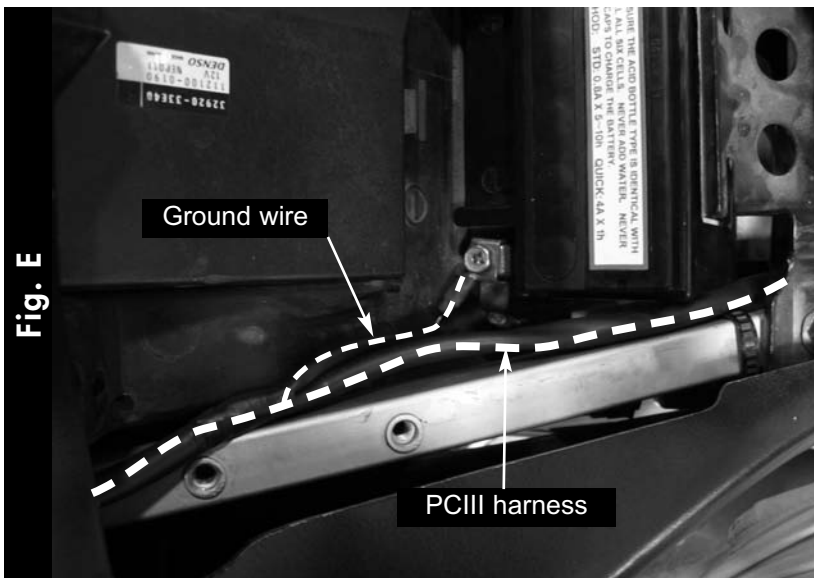

- 10 Attach the ground wire from the PCIII to the negative side of the battery (Fig. E).



- 11 Install the PCIII in the rear section of the trunk using the supplied velcro (Fig. F). Make sure to clean both surfaces with alcohol first.